



Yudian (H.K.) Automation Technology Co. Ltd.

Website: <http://www.yudian.us> <http://www.yudian.com.hk>

Email: sales@yudian.com.hk

Tel: +852-2770 8785 Fax: +852-2770 8796

AI-700 / 500

INTELLIGENT INDICATING/ALARMING INSTRUMENT

Operation Instruction

CONTENTS	Page
MAIN FEATURES.....	2
ORDERING CODE.....	3
TECHNICAL SPECIFICATION.....	5
FRONT PANEL AND OPERATION.....	7
PARAMETER AND SETTING.....	8
TERMINAL LAYOUT AND WIRING.....	11



Yudian (H.K.) Automation Technology Co. Ltd.

Website: <http://www.yudian.us> <http://www.yudian.com.hk>

Email: sales@yudian.com.hk

Tel: +852-2770 8785 Fax: +852-2770 8796

MAIN FEATURES:

- Programmable and modular inputs, supporting multiple input types of thermocouples, RTDs, voltage/current and two-wire transmitters. Suitable for measuring and displaying temperature, pressure, flow, level, humidity, etc with measurement accuracy of 0.2% full scale (0.3% full scale for AI-500).
- Single display window to set parameters and alarm points. Various dimensions are selectable.
- Supports up to 4 loops of alarms including 2 loops of high limit alarms plus 2 loops of low limit alarms. Alarms can be outputted to different relays or share one.
- With functions of digital calibrating, digital filtering, and thermocouple cold junction auto compensating, it is free of maintenance and easy operated.
- Supports RS485 communication interface, able to communicate with computers.
- Retransmission function, cooperating with X3 high precision current output module (0.2%FS), can retransmit temperature with accuracy of 0.3%FS.
- High quality and performance hardware design, using high performance tantalum capacitor or ceramic capacitor. Compared to competing models, it consumes less electricity, experiences less temperature shifting, provides higher stability and reliability and can work in a wider range of temperature. The power and I/O terminals have passed the anti-interference test of 4KV/5KHz burst of pulses.
- Universal 100-240V power supply, with thunderbolt proof and 10 seconds protection from connecting to 380VAC by mistake.

ORDERING CODE:

The ordering code of AI-700 is made up of 8 parts, for example:

AI-700 A N X3 L5 N S4 — 24VDC
 ① ② ③ ④ ⑤ ⑥ ⑦ ⑧

This means an instrument with ① model AI-501, ② dimension A (96x96mm), ③ no module in MIO (multiple input/output) slot, ④ X3 linear current output module installed in OUP (main output) slot, ⑤ L5 dual relay output module in ALM (alarm) slot, ⑥ no module in AUX (auxiliary output), ⑦ RS485 communication interface module S4 in COMM (communication) slot, and ⑧ 24VDC power supply.

The meanings of the 8 parts of ordering code are as below:

① Shows the model of instrument

AI-700 Indicating/Alarming Instrument with measurement accuracy of 0.2%FS

AI-500 Indicating/Alarming Instrument with measurement accuracy of 0.3%FS

② Shows the front panel dimension:

Size	Front Panel Width X Height	Cut Out Width X height	Depth Behind	Light Bar
A	96 X 96 mm	92 X 92 mm	100 mm	No
A2	96 X 96 mm	92 X 92 mm	100 mm	25 segments and 4 levels
B	160 X 80 mm	152 X 76mm	100 mm	No
C	80 X 160 mm	76 X 152mm	100 mm	No
C3	80 X 160 mm	76 X 152mm	100 mm	50 segments and 2 levels
D	72 X 72 mm	68 X 68 mm	95 mm	No
E	48 X 96 mm	45 X 92 mm	100 mm	No
F	96 x 48 mm	92 X 45 mm	100 mm	No
D2(500 only)	48 X 48 mm	45 X 45 mm	95 mm	No

③ Shows the module types of multiple input/output (MIO). Selectable modules are as follows:

V5/V10 Isolated 5 /12 /10 /24VDC voltage output, can supply power for external transmitter or transducer.

V12 / V24

I4 4-20mA or 0-20mA analogue input interface with 24VDC/50mA power supply, can directly connect to two-wire transmitter

I7 0~5A current input module, can measure 5A alternating current directly.

I8 0~500V voltage input module, can measure 0~500VAC alternating voltage directly

④ Shows the module types of main output (OUTP):

Installing X3 or X5 (isolated type) current output module can retransmit process value (PV).



⑤ **Shows the module type of alarm output (ALM):**

Installing L1, L2, or L4 relay output module or L5 dual relay output module to output alarms

⑥ **Shows the module type of auxiliary output (AUX):**

Installing L1, L2, L4 or L5 relay output module to output alarms

⑦ **Shows the module type of communication (COMM):**

Installing S or S4 module to communicate via RS485 interface.

⑧ **Shows type of power supply:**

Null indicates 100~240VAC power supply, and "24VDC" indicates 20~32VDC/AC power.

Note 1: 4~20mA or 0~20mA standard current signal can be inputted by converting to 1~5V/0~5V voltage signal with a 250 ohm resistor or installing I4, module in MIO slot. I4 can supply 24VDC power to 2-wire transmitter.

Note 2: D dimension instruments have no MIO slot, and its COMM and ALM share the same slot and can't be installed at the same time. Its ALM only, support AL1 single loop alarm. D2 dimension instruments have only OOTP slot and COMM / AUX slot.

Note 3: Current module X3 and RS485 communication module S share the same power supply in the instrument, and are not electric isolated to each other. Therefore, if X3 current module is installed in OOTP slot and RS485 communication is need at the same time, then RS485 communication module should be S4 which itself has isolated power supply.

Note 4: The instrument applies the technology of auto zero and digital calibration, and is free of maintenance. If the error exceeds certain range, generally, cleaning and drying the inside of the instrument can fix it. If not, send the instrument back to the factory to examine and repair.

Note 5: Free repair and maintenance will be given in 36 months since the delivery. In order to get full and correct repair, write the phenomena and causes of the malfunction of the instrument.

TECHNICAL SPECIFICATION:

- **Input type :**

Thermocouple: K, S, R, T, E, J, B, N, WRe3-WRe25, WRe5-WRe26 (AI-700)
K, S, R, E, J, N (AI-500)

Resistance thermometer: Pt100, Cu50

Linear voltage: 0~5V, 1~5V, 0~1V, 0~100mV, 0~60mV, 0~20mV and etc;
0~10V (Install I31 in MIO slot) (AI-700)
0~5V, 1~5V, 0~500mV, 0~100mV, 0~60mV, 0~20mV, 0~10V (AI-500)

Linear current (should connect a external resistor or install I4 module in MIO slot): 0~20mA, 4~20mA

Linear resistor: 0~80 ohm, 0~400 ohm
- **Measurement range :**

AI-700: K(-100~+1300°C), S(0~1700°C), R(0~1700°C), T(-200~+390°C), E(0~1000°C), J(0~1200°C), B(600~1800°C), N(0~1300°C), WRe3-WR25 (0~2300°C), WRe5-WR26 (0~2300°C)
Pt100(-200~+800°C), Cu50(-50~+150°C)

AI-500: K(0~+1300°C), S(0~1700°C), R(0~1700°C), E(0~1000°C), J(0~1200°C), N(0~1300°C),
Pt100(-200~+800°C), Cu50(-50~+150°C)
- **Linear input :**

-9990~+30000 unit defined by user
- **Measurement accuracy :**

0.2%FS±0.1°C (AI-700); 0.3%FS±1 (AI-500)
- **Temperature display resolution :**

0.1°C; Temperature is higher than 999.9°C automatically change to 1°C; 1°C selectable (AI-700)
0.1°C for K, E, J, N, Pt100 and 1°C for S, R (AI-500)
- **Temperature shift :**

≤0.01%FS/°C (typical value is 50ppm/°C) (AI-700)
≤0.015%FS/°C (typical value is 75ppm/°C) (AI-500)
- **Electromagnetic compatibility (EMC) :**

IEC61000-4-4, ± 4KV/5KHz; IEC61000-4-5, 4KV
- **Retransmission :**

When X3 or X5 current module is installed in OOTP slot, process value (PV) can be retransmitted to standard current with maximum load resistor 500 ohm.
- **Alarm function :**

High limit, low limit, second high limit and second low limit
- **Isolation withstanding voltage :**

Between power, relay contact or signal terminals ≥2300VDC; between isolated electroweak signal terminals ≥600VDC
- **Power supply :**



Yudian (H.K.) Automation Technology Co. Ltd.

Website: <http://www.yudian.us> <http://www.yudian.com.hk>

Email: sales@yudian.com.hk

Tel: +852-2770 8785 Fax: +852-2770 8796

100~240VAC, -15%, +10% / 50-60Hz; 24VDC / AC, -15%, +10%














- **Power consumption:** ≤5W
- **Operating Ambient :**Temperature -10~+60°C; humidity ≤90%RH
- **Front panel dimension:** 96×96mm, 160×80mm, 80×160mm, 48×96mm, 96×48mm, 72×72mm, 48×48mm
- **Panel cutout dimension:** 92×92mm, 152×76mm, 76×152mm, 45×92mm, 92×45mm, 68×68mm, 45×45mm
- **Depth behind mounting surface:** ≤100mm

FRONT PANEL AND OPERATION:

- ① Display window, displays PV, code of a parameter, alarming code or parameter value
- ② Setup key, for accessing parameter tables, and confirming change.
- ③ Data shift key
- ④ Data decrease key
- ⑤ Date increase key
- ⑥ Indicator lamps: OP1 and OP2 indicate the status of current retransmission. AL1, AL2, AU1 and AU2 indicate the I/O actions of the corresponding modules.




Basic display status : When it is powered on, the display window of the instrument shows the process value (PV). This status is called basic display status. When the input signal is out of the measurable range (for example, the thermocouple or RTD circuit is break, or input specification sets wrong), the window will alternately display “orAL” and the high limit or the low limit of PV.

Parameter Setting: In basic display status, press  and hold for 2 seconds, user can access Field Parameter Table. If the parameter lock “Loc” isn’t locked (Loc=0), user can modify the value of parameters by  or . Press  key to decrease the value,  key to increase the value, and  key to move to the digit expected to modify. Keep pressing  or , the speed of increasing or decreasing value gets faster. Pressing  proceed to the next parameter. Press  and hold can return to the preceding parameter. Press  (don’t release) and then press  simultaneously can escape from the parameter table. The instrument will escape automatically from the parameter table if no key is pressed within 30 seconds. Set Loc=808 and then press  to access System Parameter Table.

PARAMETER AND SETTING

● Field parameter table (Press  and hold for 2 seconds to access)

Code	Name	Description	Setting Range
HIAL	High limit alarm	Alarm on when PV (Process Value) >HIAL; Alarm off when PV<HIAL-AHYS	-9990~ 30000
LoAL	Low limit alarm	Alarm on when PV<LoAL; alarm off when PV>LoAL+AHYS	
HdAL	Second high limit alarm	Alarm on when PV>HdAL; alarm off when PV<HdAL-AHYS	
LdAL	Second low limit alarm	Alarm on when PV<LdAL; alarm off when PV>LdAL+AHYS	
Loc	Parameter lock	0~3: allowed to modify field parameters; 4~255: can only modify "Loc"; setting Loc=808 and then pressing can access system parameter table.	0~255

● System parameter table (set Loc=808 and then press  to access)

AHYS	Alarm hysteresis	Avoid frequent alarm on-off action because of the fluctuation of PV. For temperature alarm, it is recommended to be 0.5~2℃.	0~ 200.0℃ / 0 ~ 2000 unit																														
AOP	Alarm output assignment	<table border="1"> <thead> <tr> <th>Alarm \ Output to</th> <th>LdAL (x 1000)</th> <th>HdAL (x100)</th> <th>LoAL (x10)</th> <th>HIAL (x1)</th> </tr> </thead> <tbody> <tr> <td>None</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>AL1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>AL2</td> <td>2</td> <td>2</td> <td>2</td> <td>2</td> </tr> <tr> <td>AU1</td> <td>3</td> <td>3</td> <td>3</td> <td>3</td> </tr> <tr> <td>AU2</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> </tr> </tbody> </table> <p>Example: AOP = <u> 3 </u> <u> 3 </u> <u> 0 </u> <u> 1 </u> LdAL HdAL LoAL HIAL</p> <p>It shows that HdAL and LdAL are sent to AU1, LoAL has no output, HIAL is sent to AL1.</p> <p>Note : Installing L5 dual relay output module in ALM or AUX can implement AL2 or AU2 alarm.</p>	Alarm \ Output to	LdAL (x 1000)	HdAL (x100)	LoAL (x10)	HIAL (x1)	None	0	0	0	0	AL1	1	1	1	1	AL2	2	2	2	2	AU1	3	3	3	3	AU2	4	4	4	4	0~4444
Alarm \ Output to	LdAL (x 1000)	HdAL (x100)	LoAL (x10)	HIAL (x1)																													
None	0	0	0	0																													
AL1	1	1	1	1																													
AL2	2	2	2	2																													
AU1	3	3	3	3																													
AU2	4	4	4	4																													



INP	Input specification	INP	Input type	INP	Input type	0~37
		0	K	20	Cu 50	
		1	S	21	PT 100	
		2	R	26	0~80 omhs	
		3	T (AI-700); SPARE (AI-500)	27	0~400 omhs	
		4	E	28	0~20mV	
		5	J	29	0~100mV	
		6	B (AI-700); SPARE (AI-500)	30	0~60mV	
		7	N	31	0~1V (AI-700) 0~500mV (AI-500)	
		8	WRe3-WRe25 (AI-700); SPARE (AI-500)	32	0.2~1V (AI-700) 100~500mV (AI-500)	
		9	WRe5-WRe26 (AI-700); SPARE (AI-500)	33	1~5V	
		10	User-define	34	0~5V	
		12	F2 radiation type pyrometer (AI-700 only)	35	-20~+20mV (AI-700) 0~10V (AI-500)	
		15	4~20mA, (I4 module needed)	36	-100~+100mV (AI-700) 2~10V (AI-500)	
16	0~20mA(I4 module need) 0-10V(I31 module needed, AI-700 only)	37	-5V~+5V (AI-700) 0~20V (AI-500)			
dPt	Resolution	Four formats (0, 0.0, 0.00, 0.000) are selectable For thermocouples or RTD inputs, only 0 and 0.0 are selectable, and the internal resolution is 0.1. For linear input, if the value of PV or any parameter is probably greater than 9999, format 0.000 is recommended.			0 / 0.0, / 0.00, / 0.000	
SCL	Signal scale low limit	Define scale low limit of input signal. It is also the scale of the low limit of retransmission output. For example, to transform 1~5V input signal into process value of 0~200.0, we shall set dPt=0.0, SCL=0, SCH=200.0			-9999~ +30000	
SCH	Signal scale high limit	Define scale high limit of input signal. It is also the scale of the high limit of retransmission output. For example, to transform 0~5V input signal into process value of 1000~2000, we shall set dPt=0, SCL=1000, SCH=2000.				
Scb	Input shift adjustment	Scb is used to compensate the error produced by sensor or input signal. PV_after_compensation= PV_before_compensation + Scb. For example, for the same input signal, if the measured temperature PV is 500.0°C when Scb=10.0, then PV should be 510.0°C.			-1999~ +4000	



Yudian (H.K.) Automation Technology Co. Ltd.

Website: <http://www.yudian.us> <http://www.yudian.com.hk>

Email: sales@yudian.com.hk


Tel: +852-2770 8785 Fax: +852-2770 8796

FILt	Input filter	The value of FILt will determine the ability of filtering noise. When a large value is set, the measurement input is stabilized but the response speed is slow. Generally, it can be set to 1 to 3. If great interference exists, then you can increase parameter "FILt" gradually to make momentary fluctuation of measured value less than 2 to 5. When the instrument is being metrological verified, "FILt" s can be set to 0 or 1 to shorten the response time.	0~40
OPt	Output type	0-20: 0~20mA linear current retransmission output; 4-20: 4~20mA linear current retransmission output.	
Addr	Communication address	In the same communication line, different instrument should be set to different address.	0~80
bAud	Baud rate	The range of baud rate is 1200 ~ 19200 bit/s. Can be set to 4800, 9600 or 19200.	0~ 19200

TERMINAL LAYOUT AND WIRING

Wiring graph for instruments with dimension A, A2, B, C, C3, E or F


The compensation wires for different kinds of thermocouple are different, and should be directly connect to the terminals. Connecting the common wire between the compensation wire and the terminals will cause measurement error.

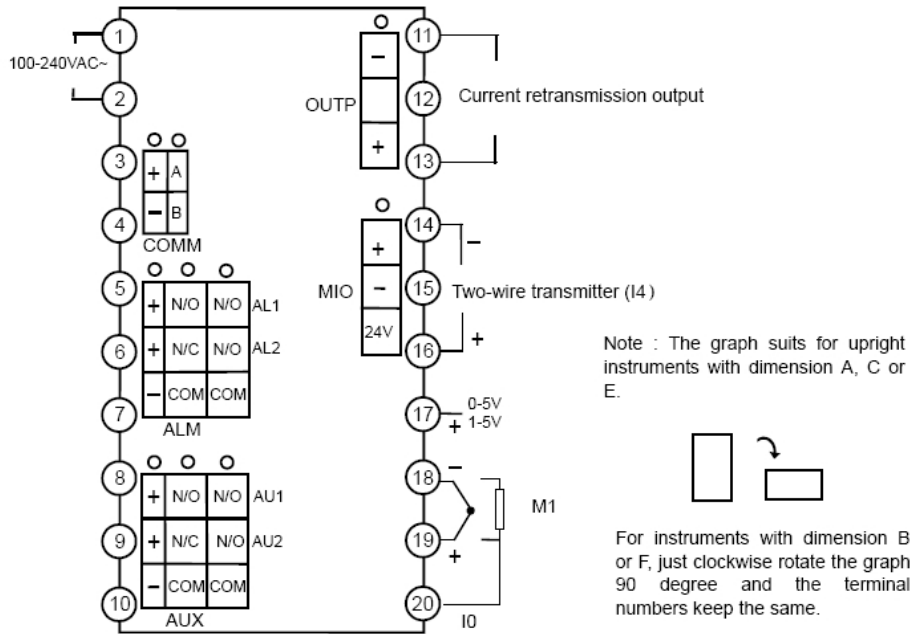

Note:

- Linear voltage signal with its range below 500mV can be inputted from terminals 19+ and 18-.
- 0~5V, 1~5V or 0~10V signal can be inputted from terminals 17+ and 18-.
- 4~20mA current signal can be converted to voltage signal with an 250 ohm external resistor and then inputted from terminals 17+ and 18-.
- If I4 module is installed in MIO slot, current signal can also be inputted from terminals 14+ and 15-, and 2-wire transmitter can be inputted from terminals 16+ and 14-.


Wiring graph for D dimension (72mmX72mm) instruments

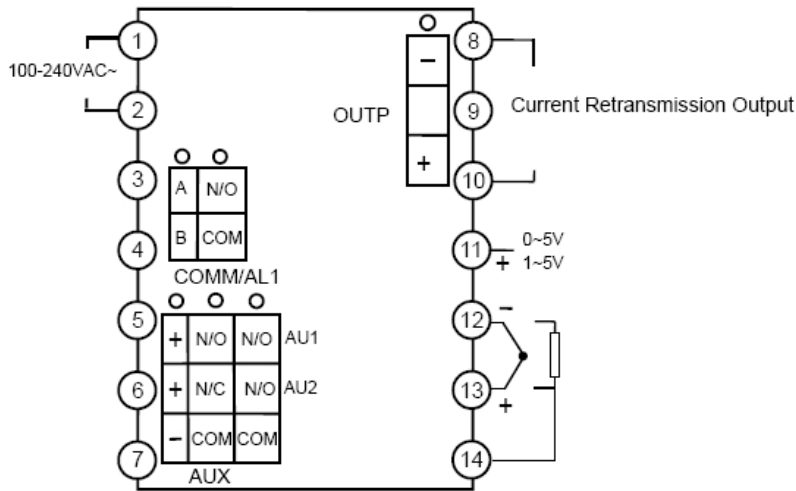

Note:

- Linear voltage signal of range below 500mV should be inputted from terminals 13+ and 12-,
- Signal of 0~5V, 1~5V or 0~10V should be inputted from terminals 11+ and 12-.
- 4~20mA linear current signal can be converted to 1~5V voltage signal with a 250 ohm resistor and inputted from terminals 11+ and 12-.

Wiring graph for D2 dimension (48mmX48mm) instruments (AI-500 only)

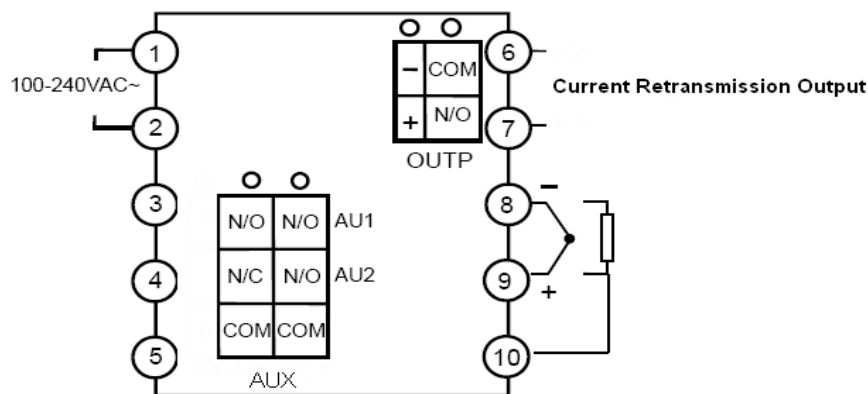

Note:

- Linear voltage signal of range below 500mV should be inputted from terminals 8- and 9+,-,
- D2 dimension not support 0~5V or 1~5V input. However, 0~5V or 1~5V can be converted to 0~500mV or 100~500mV by connecting external resistor (it belong to custom made order, please contact our sales or agent)
- 4~20mA linear current signal can be converted to 100~500mV voltage signal with a 25 ohm resistor and inputted from terminals 8- and 9+.